

# Automatic Lubrication System

Automatic lubrication systems can be added to any existing Seatrax crane. The system will grease lubrication points automatically based on prime mover run time. Each grease point receives an exact pre-determined amount of grease, ensuring no one fitting receives too much or too little grease. The system is expandable to any or all of the grease points outlined as identified in the Seatrax standard lubrication schedule.

Typical locations include:

- Upper bearings
- Lower bearings
- Boom heel pins
- Sheaves
- Boom hoist
- Main hoist
- Aux hoist



**Left:** Injectors

**Center:** Lubrication system installed on lower bearing shoes

**Right:** Integrated pump/reservoir

Systems are designed for use in safe or hazardous areas.

The system includes grease reservoir, high pressure grease pump, electronic controls, injectors, stainless steel tubing, high pressure hoses, fittings, wiring and mounting hardware for a complete installation package.

**For more information, contact a Seatrax representative at 713-896-6500.**

**Seatrax, Inc.**  
13223 FM 529  
Houston, TX 77041  
[www.seatrax.com](http://www.seatrax.com)

